



# StageNow

Profile Name:Velocity\_x86\_Install

Barcode Type:PDF417

Minimum Compatible MX Version:4.4


Network Connection:This Profile requires your Zebra device to be able to connect to your StageNow Tool/to the package which is hosted outside of StageNow FTP Server.



ByPass GSM Setup Wizard : Scan the barcode at the Android Welcome Screen to bypass the GSM Android Setup Wizard and begin staging with StageNow (see \*NOTE below)

## Scan Barcodes with StageNow Client:

1

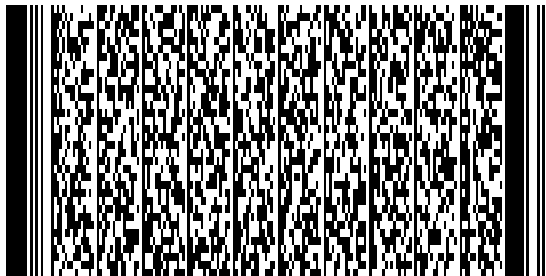

\*NOTE: By scanning the Setup Wizard Bypass barcode, you confirm that you have read and agree to the terms and conditions of our restricted asset end user license agreement (EULA) which can be found at:

[https://www.zebra.com/content/dam/zebra\\_new\\_ia/en-US/channel/terms-conditions/na/zebra-restricted-eula-170515.pdf](https://www.zebra.com/content/dam/zebra_new_ia/en-US/channel/terms-conditions/na/zebra-restricted-eula-170515.pdf)



# StageNow

Profile Name:Velocity\_x86\_Install

Barcode Type:Linear

Minimum Compatible MX Version:4.4

Network Connection:This Profile requires your Zebra device to be able to connect to your StageNow Tool/to the package which is hosted outside of StageNow FTP Server.



ByPass GMS Setup Wizard : Scan the barcode at the Android Welcome Screen to bypass the GMS Android Setup Wizard and begin staging with StageNow (see \*NOTE below)

## Scan Barcodes with StageNow Client:

1



2



3



4



5



6



7



8



9



10



\*NOTE: By scanning the Setup Wizard Bypass barcode, you confirm that you have read and agree to the terms and conditions of our restricted asset end user license agreement (EULA) which can be found at:

[https://www.zebra.com/content/dam/zebra\\_new\\_ia/en-US/channel/terms-conditions/na/zebra-restricted-eula-170515.pdf](https://www.zebra.com/content/dam/zebra_new_ia/en-US/channel/terms-conditions/na/zebra-restricted-eula-170515.pdf)



# StageNow

Profile Name:Velocity\_x86\_Install

Barcode Type:Linear

Minimum Compatible MX Version:4.4

Network Connection:This Profile requires your Zebra device to be able to connect to your StageNow Tool/to the package which is hosted outside of StageNow FTP Server.



ByPass GSM Setup Wizard : Scan the barcode at the Android Welcome Screen to bypass the GSM Android Setup Wizard and begin staging with StageNow (see \*NOTE below)

## Scan Barcodes with StageNow Client:

11

